



## Anleitung zum Wechseln der Taster-Wippe


Zum Wechseln der Wippe ist ausschließlich das mitgelieferte Hebelwerkzeug zu verwenden. Schraubendreher oder andere Werkzeuge führen gegebenenfalls zu Beschädigungen an Taster oder Wippe. Die Wippe ist links und rechts an jeweils 2 Stellen am Gehäuse-Unterteil des Tasters arretiert. Nach dem Lösen der Arretierungen, ist die Wippe einfach abzuheben.

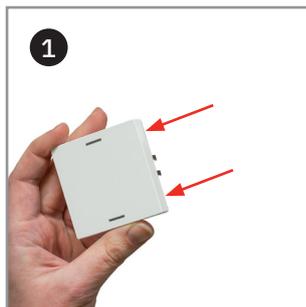

1 Die Arretierungen sind Seitlich und an der Rückseite des Tasters zu erkennen.

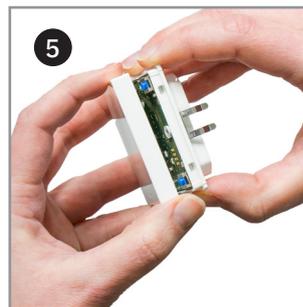


5 Die Wippe lässt sich nun vorsichtig nach links abnehmen.

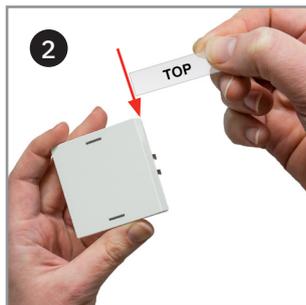

2 Hebelwerkzeug von oben, bis zur ersten Arretierung zwischen Wippe und Taster-Unterteil einführen. „TOP“ zeigt dabei lesbar nach vorne.




6 Die neue Wippe mit ihren Arretierungen von links an den Aussparungen am Taster-Unterteil ansetzen.

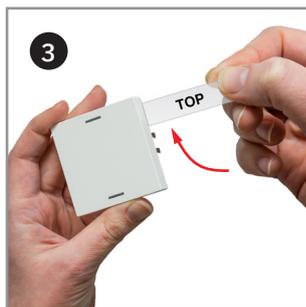


3 Vorsichtig hebeln, bis sich die erste Arretierung löst.



7 Die Wippe nun auf der gegenüberliegenden Seite auf das Taster-Unterteil drücken, bis die Arretierungen einrasten.

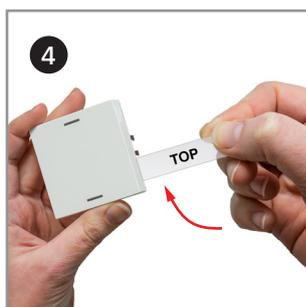

4 Vorherigen Schritt an der unteren Arretierung wiederholen.

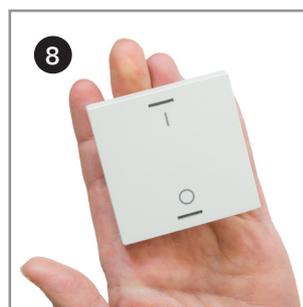


8 Fertig.


Technische Änderungen und Irrtümer vorbehalten. Abbildungen können abweichen.

## Instructions for changing the rocker


To replace the rocker, only use the lever tool supplied. Screwdrivers or other tools may damage the push-button or rocker. The rocker is fixed to the lower part of the push-button housing at two points on the left and right. After loosening the locks, the rocker can simply be lifted off.

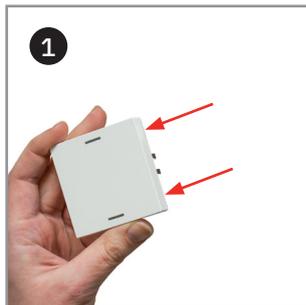


1 The locks are visible on the side and on the back of the button.

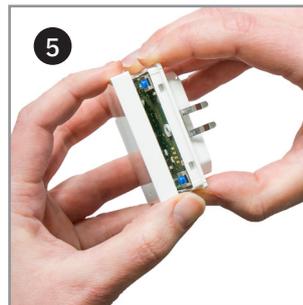


5 The rocker can now be carefully removed to the left.

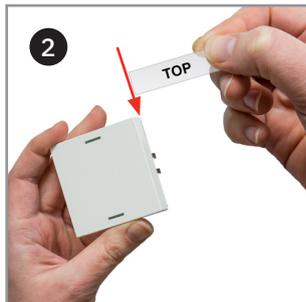

2 Insert the lever tool from above up to the first lock between the rocker and the lower part of the push-button. „TOP“ points to the front.

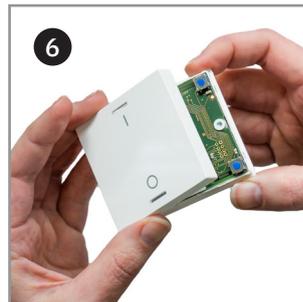


6 Interlock the new rocker from the left against with the recesses on the lower part of the push-button.

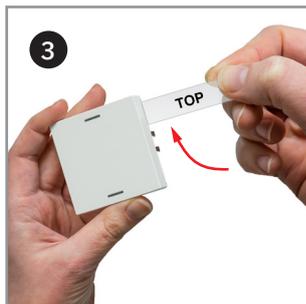


3 Carefully lever until the first lock is released.



7 Now press the rocker on the opposite side onto the lower part of the push-button until the rocker snaps into place.

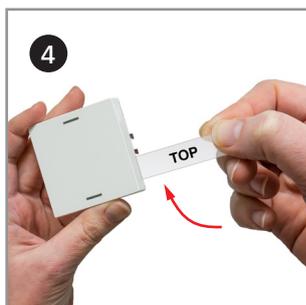

4 Repeat the previous step on the lower lock.

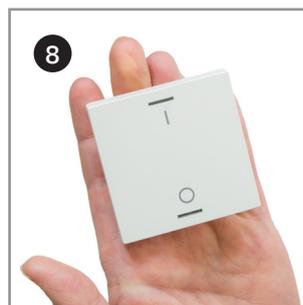

8 Done.

Technical modifications and corrections may be made without notice. Images may differ.